




JBL Pulse LED Lights Disassembly

A guide on how to get to the light up feature that occurs while you play music.

Written By: Maxwell Busenbarrick

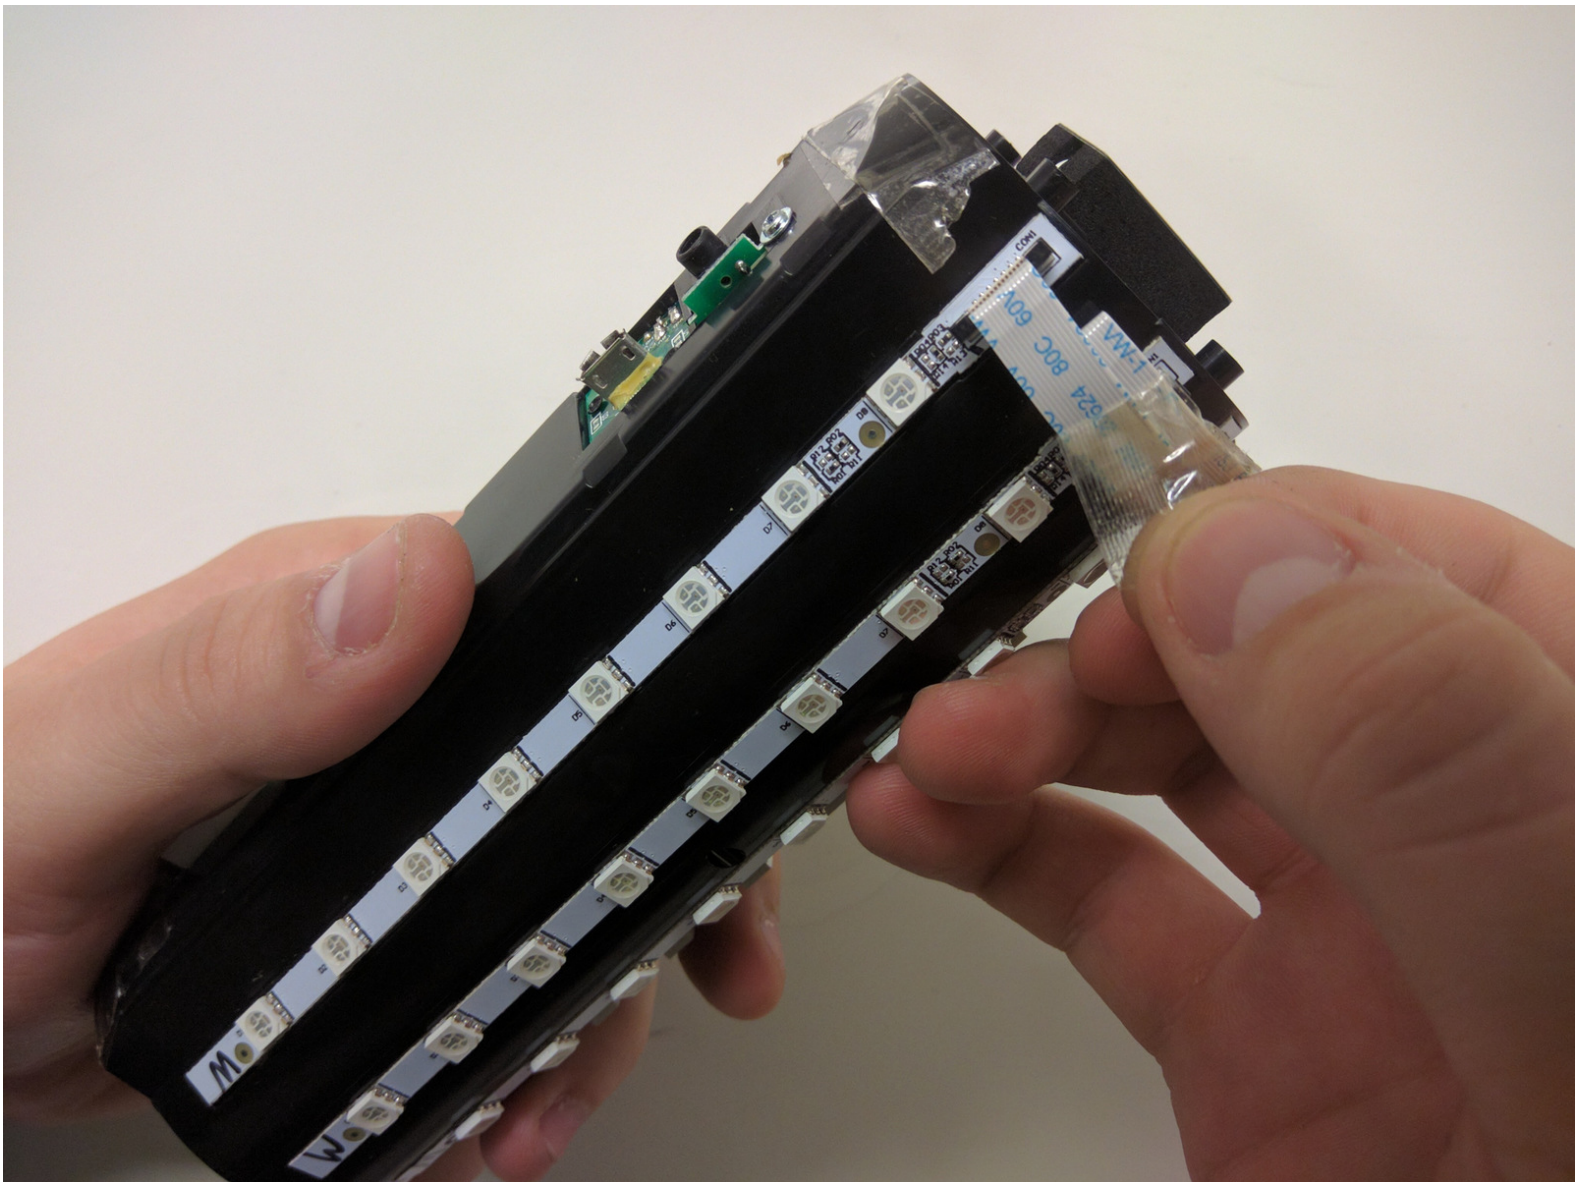



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Button Board




- Use a plastic opening tool to pry around the edges of the circular rubber panel.

Step 2



- Once the edges are loose, pull off the rubber button panel completely.
- ☑ New adhesive will have to be applied when reassembling.

Step 3

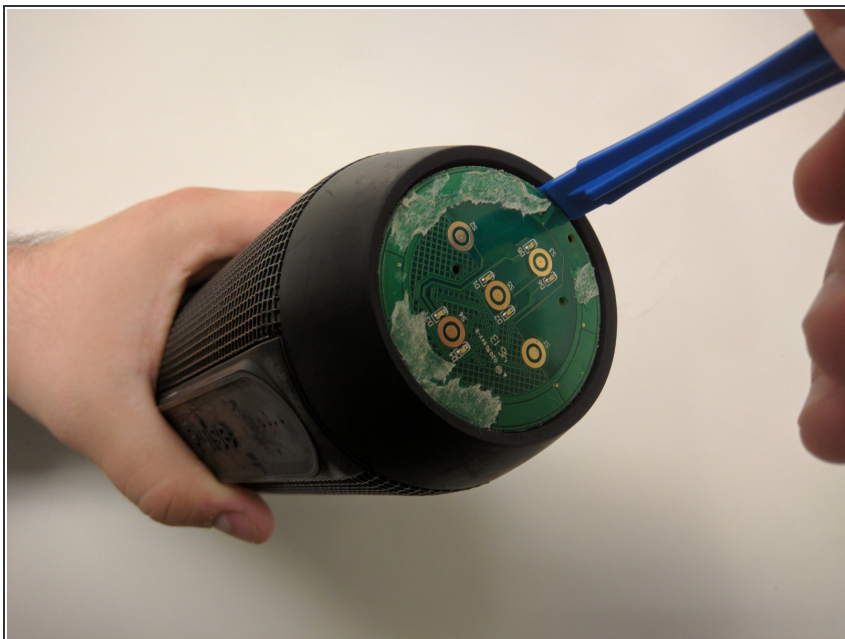


- Use your plastic opening tool to pry the button board loose by lifting the edges.

Step 4



- Lift the button board, exposing the attached cable.
- ☑ New adhesive will have to be applied when reassembling.

Step 5

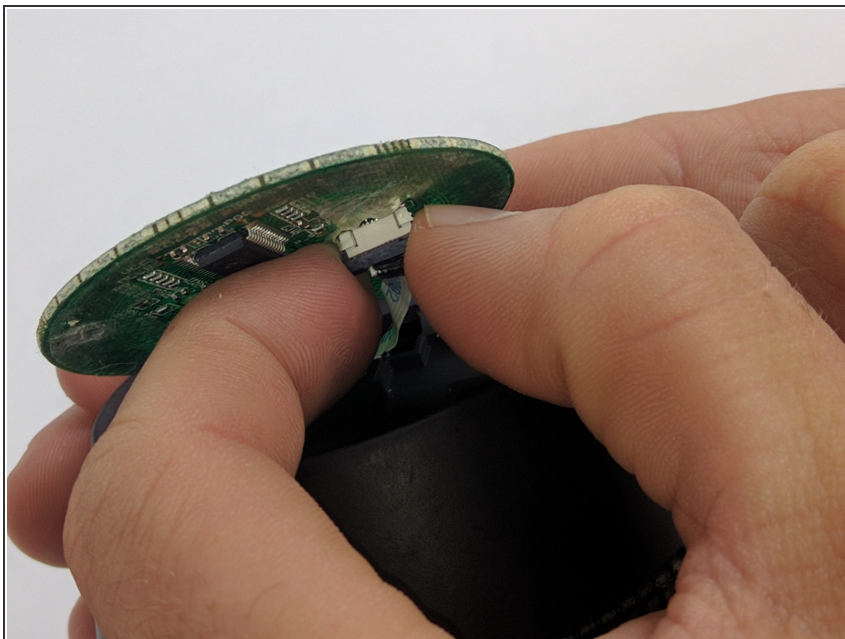



- Pull black piece on top of socket away from board to loosen, then detach the cable.

Step 6 — Outer Casing



- Take out the four 9mm black PH0 screws from the top and bottom of the device.
- Pull off cap by hand.
- The outer casing can now be removed.

Step 7 — JBL Pulse LED Lights Disassembly

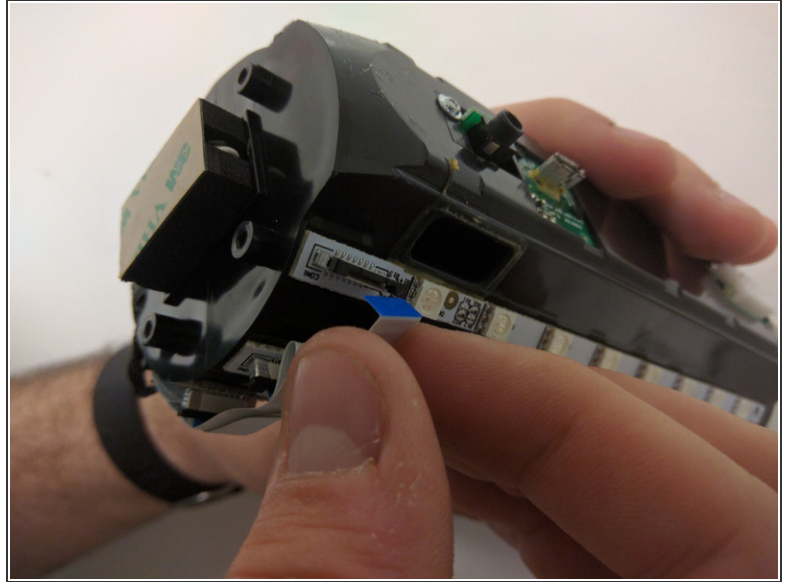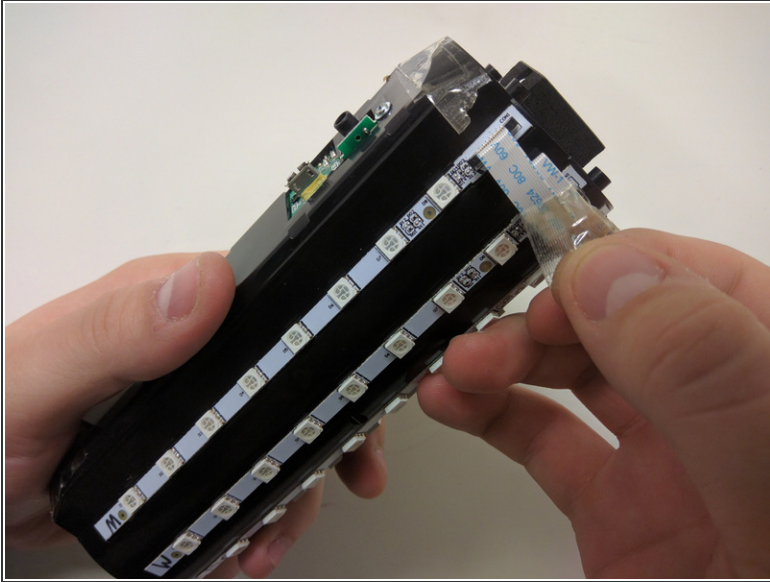

- Remove the tape around the cables on the top of the device.
- Remove the cables by lifting up on the black bracket and then pulling the cable out.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-31 09:58:22 PM.